

Thermomix® Sensor

Welcome Booklet



thermomix
VORWERK

Contents

- 4** What is Thermomix® Sensor?
- 6** First Steps
- 8** How to Set up Thermomix® Sensor
- 10** How to Use Thermomix® Sensor

- 14** **Cooking**
 - Perfect Inside and Out
- 18** Meat
- 19** *Beef*
- 20** *Pork*
- 21** *Lamb*
- 22** *Poultry*
- 24** Fish
- 26** Bread
- 30** Cake

- 34** **FAQs**
- 41** **Food Safety Note**



What is Thermomix® Sensor?


Thermomix® Sensor is a food thermometer, but it's also so much more than that. With Thermomix® Sensor, we are extending, for the very first time, the Thermomix® Guided Cooking experience to your oven, stovetop and grill. It's all about knowing the precise core temperature to get the perfect texture for your cakes, breads, meats and fish.



First Steps


Getting started with Thermomix® Sensor is quick and easy. Just install it once and use it for your daily cooking. Simply insert your Thermomix® Sensor and start cooking.

1. Unbox your Thermomix® Sensor. Open the battery compartment at the back of Thermomix® Sensor and remove the protective film to release the battery. When the film is removed, the probe battery will begin charging.

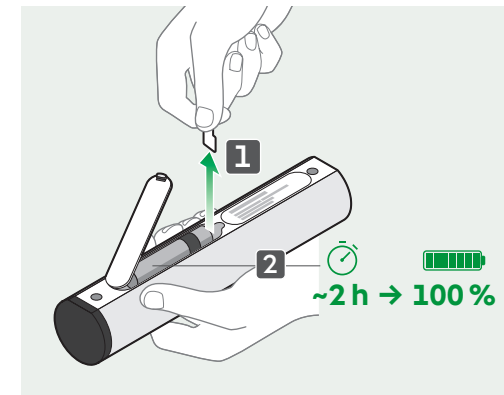

2. Check the Quick Start Guide and get familiar with the safety instructions in the User Manual.

3. After an initial 2 hours charging time, your Thermomix® Sensor will be fully charged and ready to use. Once fully charged, the battery will last 24 hours.

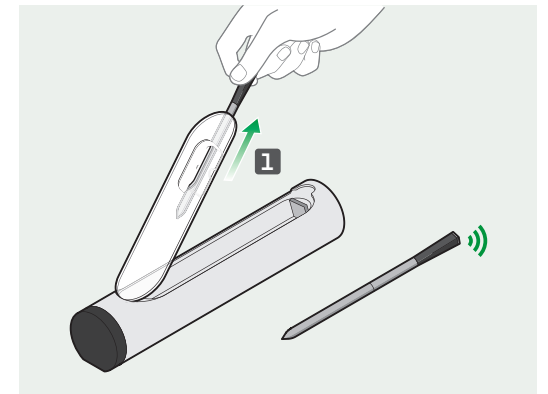

4. Open the charger and remove the probe. When you remove the probe from the charger, the LED flashes green indicating the charger is connected to the probe.

5. Before using it for the first time, clean the probe with water and washing up liquid to remove any production residues.

Holder

Probe

Charger

How to Set up Thermomix® Sensor

1. Switching on and off


When you take the probe out of the charger, it will automatically be switched on and be ready to use. To switch the probe off, put it back into the charger and close it. Remove the probe from the charger before connecting to Thermomix® TM6 or Cooking Centre app.

2. Connecting your Thermomix® Sensor to Thermomix® TM6

On your appliance display, proceed as follows:

- Select the menu by tapping on the three horizontal lines in the top left corner.
- Select "Settings".
- Activate Bluetooth® if not already on.
- Select "Connected devices". Only 1 Thermomix® Sensor can be connected to your Thermomix® device at any time).
- Select "Thermomix® Sensor"/"Add device".
- Thermomix® Sensor is now connected.

You can access Thermomix® Sensor mode via the Modes and Tools screen on Thermomix® TM6.

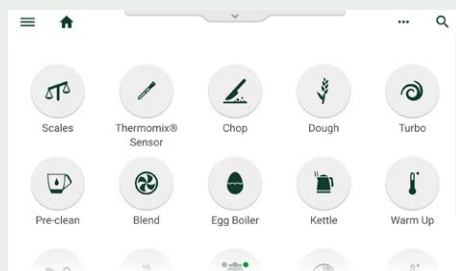

Cooking Centre


The Cooking Centre allows you to check, from any screen on your Thermomix® TM6 display and at any time during the cooking session, the current cooking status of your recipe step.

Whether in Guided Cooking or cooking manually, click on the Cooking Centre menu on top of your screen:



And access:

- Your recipe status: remaining cooking time, current and target temperature and speed.
- Timer
- Thermomix® Sensor

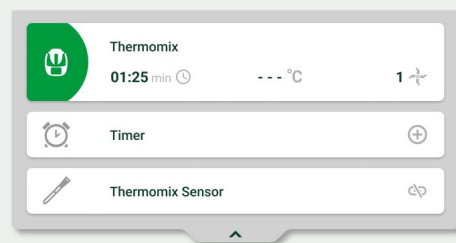

3. Connecting your Thermomix® Sensor to Cooking Centre mobile app

- Scan the QR Code below to install the Cooking Centre mobile app from the App Store or Google's Play store.




- Open the app. To be able to use Thermomix® Sensor with the Cooking Centre mobile app, tap the "+" button in the bottom right corner of the app then select "Thermomix® Sensor". You will be asked to provide permission to use Bluetooth® and receive notifications (Android devices might ask to use Local Services). In order for Thermomix® Sensor to work, make sure you provide your consent.

Once connected to Bluetooth®, the app will find Thermomix® Sensor and pair it to the app.

After pairing Thermomix® Sensor to the app, a new card with Thermomix® Sensor will appear on the home screen. Tap the card to start.

To start cooking or baking with Thermomix® Sensor, simply tap "Set temperature" and our wizard will guide you through the best options for the food you want to prepare. If you know the core temperature you need, you can also set a temperature manually.

How to Use Thermomix® Sensor

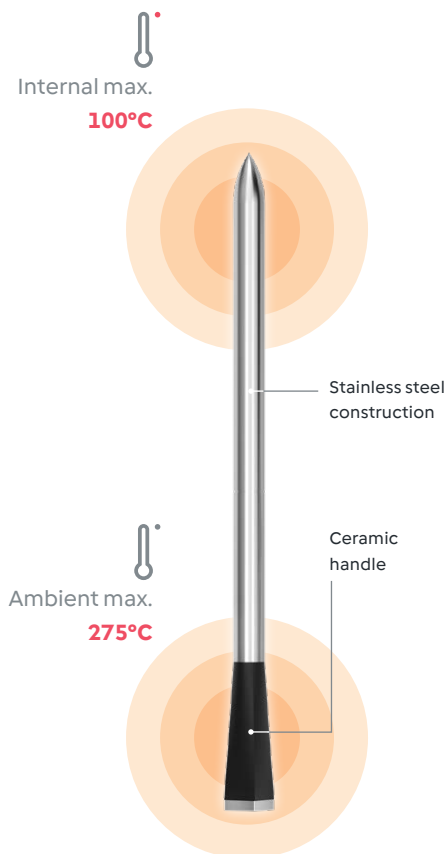

1. Positioning the probe and charger

During the cooking process, the probe continually transmits data to Thermomix® TM6 and the app. The charger acts as a repeater and amplifies the signal. You must therefore ensure that the charger is always near the probe: for example, when

baking, place the charger close to the oven. If desired, use the magnets which are on the back of the charger.

Thermomix® TM6 can be a little further away from the probe and its charger (between 1 m to 50 m depending on the environment).

2. Inserting the probe into the food


Thermomix® Sensor is a Bluetooth® thermometer with two sensors. The internal temperature sensor is located in the first third of the tip. It measures the internal temperature of the food and therefore needs to be positioned as close as possible to the core of the food. The second sensor is located inside the black ceramic end and measures the ambient temperature.

The reference notch (see illustration on p. 11) also needs to be inserted into the food to ensure correct temperature readings and accurate time calculations. For doughs and batters that will continue rising while baking, the reference notch does not necessarily need to be fully inserted but placed close to the batter surface.



To use Thermomix® Sensor, fish or meat fillets should be at least 2 cm thick.

Insert the probe (tip and reference notch) into the food.

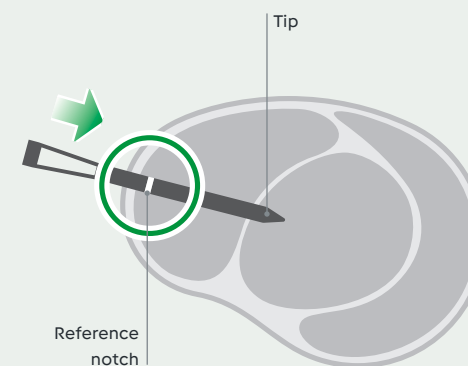


Using the holder

When preparing baked goods with mixtures that are not firm enough to hold the probe (e.g. cake batters with a soft or fairly liquid consistency), you need to use the holder to maintain the probe in the right position in the food and prevent it from sinking into the dough.


To use the holder, you can choose between two different insertion angles, A and B (see illustration below), depending on the size of the baking tin and the quantity of batter.

You may refer to the videos available on TM6 Guided Cooking recipes and on the app.

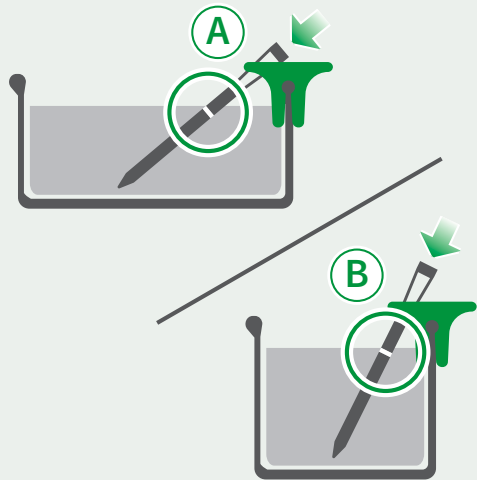

The holder can be used up to a temperature of 220°C.

Place the holder on the edge of the baking tin as shown below, slide the probe through the holder and into the food.

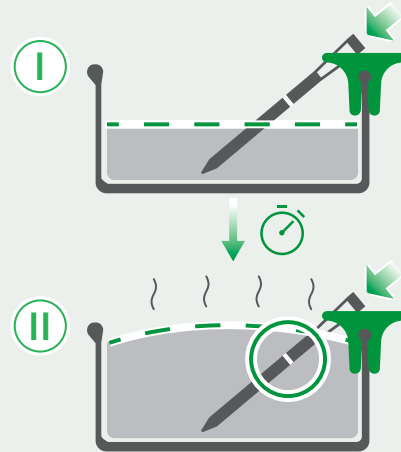

For doughs or batters that rise, the insertion depth of the probe may vary.

- I. Dough level before baking: the probe is inserted at least halfway between tip and notch. The reference notch may be visible.
- II. Dough rises during baking and covers the notch.

Make sure that the tip of the probe never touches the baking tin.

3. Cooking with the probe

During the cooking process, Thermomix® Sensor is permanently connected to your Thermomix® TM6 and/or to the Cooking Centre app (max. 2 connected devices). Information on the temperature and remaining cooking time are available on the display. If cooking meat or fish, you will be notified when it needs to be removed from the heat to let it rest until the core temperature is reached. After the resting time, your dish will be ready to serve (make sure you have allowed notifications on the app).

Cooking freestyle

The ceramic end of the probe should not be exposed to excessive heat. If you use it with very high temperatures, for example with a barbecue or a sizzle plate, sear the food first over a high heat then slide it over a lower heat (less than 275°C) before inserting the probe. Should the probe get too hot, you will get a notification on the Cooking Centre (app or device).

When cooking in a pan or on the grill, remember to flip the meat or fish once the surface underneath is browned.

4. Cleaning

- Allow the probe to cool down before cleaning it.
- Clean the probe and the holder with water and washing-up liquid after every use. Do not use cleaning products that contain alcohol, ammonia, benzene or abrasives as these could damage the device.
- Do not immerse the probe in water for long periods of time.
- Make sure that the probe and holder are completely dry before putting them back in the charger.
- After continued usage, the probe may become tarnished. This is normal and will not affect the performance of the probe.

Tips

- For best results with charcoal barbecues, wait for the flames to die down. The easiest technique to control the temperature across the grill is then to put all the coals to one side, so you have a very hot side and one with no direct heat.
- If you are using a gas barbecue or a pan on the hob, ensure you do not exceed the maximum temperature of 275°C.
- Do not forget to turn the meat or the fish once or twice during the process for even cooking.
- Remain close to the grill if you are in charge and watch out for little hands.



Cooking

Perfect Inside
and Out



Turn a guess into success with
Thermomix® Sensor.

Thermomix® Sensor is *the* accessory that completes your kitchen.

Thermomix® Sensor gives you the confidence to cook both everyday meals and for special occasions, safe in the knowledge that the results will be nothing less than perfect.

What if you could tell what is happening inside your food as it cooks and be able to check if a cake is properly baked or fish is perfectly cooked?

How many times have you stopped yourself from trying new recipes in fear that you won't get it right?

Thermomix® Sensor will become your best friend because even though each food has its own cooking point, the precision of Thermomix® Sensor will help you reach perfection every time.



Why use Thermomix® Sensor?

- Enjoy the Guided Cooking experience for the very first time outside the mixing bowl when using your oven, stovetop and grill
- Ensure greater food safety by guaranteeing the right core temperature
- Monitor your cooking status in the Cooking Centre of your Thermomix® TM6 and get notifications on your mobile
- Obtain chef's quality cooking results
- High precision on monitoring the core and ambient temperatures
- Simple to use: take the probe out of the charger and follow the instructions on Thermomix® TM6 and/or the app
- Reliable Bluetooth® system



Thermomix® Sensor probe may be used at a maximum ambient temperature of 275°C. The maximum core temperature that can be measured is 100°C.

The magic trio: Thermomix® + Sensor + Cooking Centre app.

Thermomix® Sensor is the perfect addition to your Thermomix®. The process is very simple:

1. Start cooking as usual with your Thermomix®.
2. Follow step-by-step instructions on your Thermomix® display or directly in the Cooking Centre app and use Thermomix® Sensor as indicated.
3. Check the progress of your recipe via the Cooking Centre menu on your Thermomix® or wait for the notification on your smartphone when your meat, fish or baked goods are ready.

What do I need Thermomix® Sensor for?

Use with breads, cakes, meat, poultry, and fish.

What devices can it be used with?

Thermomix® Sensor works with the following kitchen appliances: oven, barbecue, and stove top cookware.

A beef Wellington made easy!

One of the fundamental rules for tender beef is to not let it go past the point where it becomes dry and difficult to cut and eat. That pinkish tone that recipes ask for sometimes make us wish we could have a look inside. Getting a rosy hue inside a good-quality cut of beef, without the meat being raw, is no easy task; even less so if wrapped in puff pastry as in a beef Wellington. You can't simply cut it at the edge and peek inside.

We have good news for you!

Thermomix® Sensor will help you get it just right.

Thermomix® Sensor provides you with the core temperature needed for each cut of beef to reach your preferred level of doneness, whether rare, medium rare, medium, medium well, well done or fall apart tender (e.g. brisket).

Once you have selected the type and cut of beef you wish to prepare from the list available within Thermomix® Sensor mode on TM6 or within the app, insert the probe, ensuring the tip is in the core of the thickest part of the meat and the reference notch fully inserted.

- For steaks, insert probe horizontally from one end of the steak.
- For bigger cuts, such as roasts, insert the probe diagonally from the top.
- For cuts with bones, make sure the probe is not touching the bone.



For steak – If possible, buy steaks of a similar thickness, at least 2 cm thick.

Once the cooking point is selected and the probe inserted, press Start.

Thermomix® Sensor will show the estimated cooking time and the current core temperature. For meats, after a few minutes, the initial estimated cooking time will continually update as the core temperature increases. You will get a notification to remove the meat from the heat and let it rest until the core temperature is reached. After the resting time, the meat is ready to serve.

Pork

The cooking points available for pork are medium rare, medium, medium well, well done and fall apart tender, each of them being offered for relevant cuts only. Once you have selected the type and cut of pork you wish to prepare from the list available within Thermomix® Sensor mode on TM6 or within the app, insert the probe, ensuring the tip is in the core of the thickest part of the meat and the reference notch fully inserted.

- For steaks (e.g. chops), insert probe horizontally from one end of the steak.
- For bigger cuts, such as roasts, insert the probe diagonally from the top.

- For cuts with bones, make sure the probe is not touching the bone. Once the cooking point is selected and the probe inserted, press Start.

Thermomix® Sensor will show the estimated cooking time and the current core temperature. For meats, after a few minutes, the initial estimated cooking time will continually update as the core temperature increases. You will get a notification to remove the meat from the heat and let it rest until the core temperature is reached. After the resting time, the meat is ready to serve.



When cooking ribs, ensure there is approx. 2 cm of meat on the bones.



When cooking meat with bones, insert the probe parallel to the bone, not pointing towards it.

Lamb

The cooking points available for lamb are rare, medium rare, medium, medium well, well done and fall apart tender each of them being offered for relevant cuts only.

Once you have selected the type and cut of lamb you wish to prepare from the list available within Thermomix® Sensor mode on TM6 or within the app, insert the probe, ensuring the tip is in the core of the thickest part of the meat and the reference notch fully inserted.

- For chops or flat cuts, insert the probe horizontally from one end of the cut.
- For bigger cuts, such as roasts, insert the probe diagonally from the top.
- For cuts with bones, make sure the probe is not touching the bone.

Once the cooking point is selected and the probe inserted, press Start.

Thermomix® Sensor will show the estimated cooking time and the current core temperature. For meats, after a few minutes, the initial estimated cooking time will continually update as the core temperature increases.

You will get a notification to remove the meat from the heat and let it rest until the core temperature is reached. After the resting time, the meat is ready to serve.



Poultry

Stress-free roasts

Perfect for Christmas day as well as your regular Sunday lunch.

Cooking the perfect turkey can sometimes be challenging, to say the least; knowing when to take it out of the oven is not easy. It should be timed so that it is fully cooked but not dry; it should be beautifully golden on the outside whilst still moist and tender inside.

Getting the centrepiece for Christmas dinner cooked just right can make the festive day quite stressful for the person in the family who is in charge of cooking. Constantly checking on the turkey can be a real distraction from the joy of spending precious time with your family, but that no longer has to be the case with Thermomix® Sensor. Join in all the games, be present and enjoy a drink or two, safe in the knowledge that your mobile will let you know when it's done.

The Poultry category covers a varied range of birds from chicken to goose.

The cooking points available will differ depending on the type of poultry you select. For example, duck and goose breasts allow rare and medium rare cooking points while, for food safety reasons, chicken and turkey don't.

When cooking feathered game or wild poultry, refer to the duck category.

Once you have selected the type of poultry: chicken, turkey, duck, or goose, and selected the cut from the list available within Thermomix® Sensor mode on TM6 or within the app: whole birds, or specific cuts, with or without bones (breast, leg, or thigh), insert the probe, ensuring the tip is in the core of the thickest part of the meat and the reference notch fully inserted.



- For whole birds, insert the probe in the thickest part of the breast.
- For breasts, insert the probe horizontally in the thickest part of the cut.
- For cuts with bones and whole birds, make sure the probe is not touching the bones.

Once the cooking point is selected and the probe inserted, press Start.

Thermomix® Sensor will show the estimated cooking time and the current core temperature. For meats, after a few minutes, the initial estimated cooking time will continually update as the core temperature increases.

You will get a notification to remove the meat from the heat and let it rest until the core temperature is reached. After the resting time, the meat is ready to serve.

When cooking on a barbecue, ensure the probe's ceramic end is a minimum of 10 cm away from the heat source.



Fish



Cook a whole fish

with confidence

Fish can be expensive to buy and, for many of us, we avoid splashing out on foods that we are not confident of being able to get just right. Fish is very delicate and overcooking it can lead to it becoming dry and losing its tenderness. Grilled, steamed, boiled, fried or oven-roasted, fish is one of the foods for which the right level of doneness is essential, but this shouldn't stop you from exploring the possibilities that are out there. Instead, why not think of your Thermomix® Sensor as your sixth sense, telling you when your fish is perfectly cooked?

The Fish category on the Cooking Centre mobile app covers various types of fish. If the exact type you are looking for is not listed, select "Other".

The cooking points available for fish are medium, medium well and well done.

Once you have selected the type and cut of fish from the list available within Thermomix® Sensor mode on TM6 or within the app, insert the probe, ensuring the tip is in the core of the thickest part of the fish and the reference notch fully inserted. Please note that "Other" refers to whole fish or bigger cuts. Best results for fish are obtained with large fillets or whole fish.

- For fillets, insert the probe horizontally in the thickest part of the fillet.
- For whole fish, insert the probe in the thickest part and avoid touching the spine and bones.
- Fish fillets should be a minimum of 2 cm thick.

Once the cooking point is selected and the probe inserted, press Start.

Thermomix® Sensor will show the estimated cooking time and the current core temperature. For fish, after a few minutes, the initial estimated cooking time will continually update as the core temperature increases. Once the core temperature is reached, you will get a notification to remove the fish from the heat. After the resting time, the fish is ready to serve.



GOOD TO KNOW

The total recipe cooking time will depend on the weight and thickness of the meat or fish, the initial temperature of the food and your preferred degree of cooking.

Bread



Baking bread to perfection

Baking homemade bread gives you an unparalleled feeling of satisfaction. It is the experience of being able, with only two or three basic ingredients, to create a food which is central to almost all gastronomic cultures. Is there anything more comforting than the smell of freshly baked bread?

It can, however, often seem quite intimidating. Of course, the dough itself and the proving is crucial, but the success guarantee on our Cookidoo® recipes removes that initial obstacle. The bake, however, is more difficult to write accurately into a recipe, predominantly because of the variations in ovens. The classic way of telling whether or not bread is cooked is to tap it underneath and listen for a hollow sound, but what if it sounds hollow to you but not to your friend? Who's right? It's not a foolproof method.

Particularly for inexperienced bakers, that uncertainty is no longer an issue when you have the Thermomix® Sensor inserted in your loaf. All you have to do is wait for the notification on your phone and get ready to impress. Once you see how easy it is, you'll wonder why you haven't always made your own bread at home.

Make sure that the tip of the probe never touches the baking tin.



It is important to check whether the recipe you wish to prepare belongs to the Bread group. If so, you need to identify the bread type.

Bread doughs are basically a combination of flour, water, salt and yeast or starter culture. Some doughs might contain beer or baking powder as leavening agents. Doughs can be savoury or sweet. In most cases, doughs can be handled with hands.

- **Basic doughs** contain flour, water or another non-fatty liquid, salt and yeast or another fermenting agent. They may also contain herbs, spices, and seeds.
- Besides flour, water, salt and yeast, **rich doughs** also contain fat (butter, oil, lard), sugar or honey, eggs or cream. A rich dough can contain some or all these ingredients (e.g. brioche, panettone).



Some cakes containing fresh fruit, vegetables, eggs, sugar but no yeast, might be called bread (e.g. Banana bread). However, they should be baked using Cake mode (Basic and fresh fruit cakes option, instead of Bread mode).

Once the dough is ready to be baked, choose whether it is a basic or a rich dough.

Insert the probe into the dough, ensuring the tip is in the core of the dough and the reference notch is fully inserted or close (max. 1 cm) to the dough surface. The dough will cover it when rising. Make sure the tip of the probe does not touch the baking tin.

If the dough is not firm enough to hold the probe, a baking tin will be needed. In such cases, use the holder to keep the probe in place.

Once the bread type is selected and the probe inserted, press Start.



Bake the bread until the core temperature shown in the Cooking Centre reaches the target temperature. Thermomix® Sensor will show the estimated baking time and the current core temperature. The estimated baking time will continually update as the core temperature increases.

Once the core temperature is reached, you will receive a notification to remove the bread from the oven.

Always let the bread cool down out of the oven before removing the probe, cutting and serving. If bread is cut/served while still very hot, the crumb will still be humid and may not hold itself.

Thermomix® Sensor guarantees precise control of your baking, regardless of the type of oven you use, dough shape, or baking tin. It ensures the perfect core temperature even if the baking time varies from that of the recipe.

Cake



Master cakes and sweet treats

With the touch of a button

Cake batters are normally thinner than bread doughs and require a baking tin. Most cake batters contain flour, eggs, sugar and a leavening agent (e.g. baking powder, bicarbonate of soda, whipped egg whites).

The cake types available in Thermomix® Sensor mode are the following:

- **Basic and fresh fruit cakes:**

- Basic cakes contain little or no additional fat other than egg yolks (e.g. sponge cake)

- Fresh fruit cakes have a substantial amount of raw or cooked fruit or vegetables mixed into the batter (e.g. banana bread, carrot cake) plus additional ingredients such as butter

- **Rich cakes** are basic cakes with additional fat and/or ingredients such as chocolate, caramel and/or other creams or spreads (e.g. marble cake, yoghurt cake, lemon cake, pound cakes)

- **Dried fruit cakes** are cakes containing a relevant amount of dried fruit plus additional ingredients such as spices and peels (e.g. Christmas cake, farmhouse cake)

- **Other cakes:** cakes whose core consistency is humid, softer and creamier (e.g. lava cakes)


Thermomix® Sensor provides you with the right core temperature for the cake type you have selected.

Choose the type of cake and the option you need:

- Basic and fresh fruit cakes
- Rich cakes and pound cakes
- Dried fruit cakes
- Other cakes

Place the holder on the baking tin rim, position A or B facing inside the tin, according to the instructions of the recipe or to the depth of the batter:

- Use position A for standard rectangular (on the short side) or round cake tins
- Use position B when the holder is used with narrow and deep tins or placed on the internal rim of ring tins.

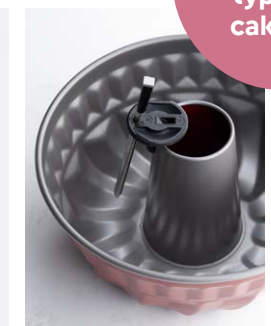

Suitable for most types of cake tin.



For best results, ensure the tin is $\frac{1}{2}$ to $\frac{2}{3}$ full.

Insert the probe correctly, using position A or B (see p. 12), into the batter making sure the tip is inserted in the core part of the dough. The reference notch might not be fully inserted but should be as close as possible to the dough surface as the dough will cover it while rising during baking.

Once the cooking point is selected and the probe inserted, press Start.

Thermomix® Sensor will show the estimated baking time and the current core temperature. The estimated baking time will continually update as the core temperature increases.

Once the core temperature is reached, you will get a notification to remove the cake from the oven. Always let the baked items cool before removing the probe.

Best results are obtained with regular shaped tins (round and rectangular or any other shape providing the probe's internal sensor can reach the core of the batter), with regular straight edges and thin rims (no fluted edges or thick rims).

For good results and accurate temperature readings, it is essential that the holder is correctly placed in a stable manner and the probe properly inserted in the core of the food.

This will not be possible if using tins with large or wide rims, small tins such as muffin trays or specific tin shapes.



GOOD TO KNOW

For baking, cooking time will depend on the type of batter, the size of your tin and whether you are using a fan or a static oven.

Simply follow the instructions, given by Thermomix® Sensor, which guarantees precise control of your baking and ensures the perfect core temperature even if the baking time varies.



If your cake is browning too quickly, cover it with baking paper.

FAQs

How can I check my battery levels?

On Thermomix® TM6:

- Remove probe from charger
- Open Settings
- Connected devices
- Thermomix® Sensor
- Thermomix® Sensor version and update

On your mobile:

- Remove probe from charger
- Open the Cooking Centre app
- Select Thermomix® Sensor card
- Press "Settings" in the top right corner of the screen to reach the device screen

Do I have to replace the charger battery?

The charger battery can last up to a year if used an average of twice a week. You'll know when the battery needs replacing as you will get a warning on Thermomix® TM6 or your mobile. To change the battery, remove the back cover, use the black plastic strip to easily remove the used battery, and replace with a new AAA battery.

How long does the Thermomix® Sensor probe's battery last?

Once fully charged, the probe's battery will last 24 hours.

What should I do if my Thermomix® Sensor probe stops connecting?

While cooking, a lot of residues can build up on the probe. These residues act like a barrier between the probe and the charger. It could be bits of food or soot from smoke, but in most cases, it's just a little bit of grease that you might not even be able to see. When this happens, the probe can't charge, so the battery might be completely drained the next time you want to use it. This is one of the most commonly occurring issues, which is why it is essential to clean the probe after each use.

The most effective way to get rid of any residue is scrubbing the probe well with a mixture of bicarbonate of soda and white vinegar using a scouring pad, then giving it a quick wash ensuring it's



completely dry before placing it back in the charger. Don't worry, the probe will be fine under running water, and it can take a good scrub! You might also want to wipe the metal contact points on the charger with a dry cloth to remove any potential leftover residue. After this, just let the probe charge for 2 hours.

Once you've got your probe connected again, make sure to get it sparkling clean after every use. Most times, hot, soapy water and the rough side of a sponge will be enough, though you might want to bust out the bicarbonate of soda and vinegar again if you start seeing a lot of discolouration.

Why does my Thermomix® Sensor keep disconnecting while in the middle of cooking?

Thermomix® Sensor charger has a built-in Bluetooth® repeater to amplify the probe signal, so you will need to keep it close to the probe during a cooking session to get proper range extension.

- If the LED on the charger flashes red, it indicates that the charger is trying to establish a connection with the probe, or that there is no connection. You need to place the charger closer to the oven, barbecue or hob.

It is essential to clean the probe after each use.



If this does not help, carefully remove probe from the food, clean it, place it back in the charger for 5 seconds before inserting it back into the food.

- If the LED on the charger flashes green, the charger is on and is connected to the probe.
- A green blinking light on Thermomix® Sensor charger indicates that the charger is on and is connected to the probe.

Should I be worried that my Thermomix® Sensor probe keeps disconnecting?

Thermomix® Sensor probe uses Bluetooth® to communicate to your device and to the app.

With Bluetooth® there are some range limitations, especially if you are cooking with heavily insulated cooking appliances. You should be able to get a maximum of 50m from your probe in the open air, but certain smokers/grills and ovens will cause range to decrease (range is more affected the thicker the material is, or the fewer gaps there are for the signal to get through).

If you find that your Thermomix® Sensor probe is disconnecting, don't worry. The Cooking Centre app has been built to handle all

types of disconnections, which means that when you do reconnect, the cooking process will update, and carry on as normal.

Towards the end of the cooking time, we recommend keeping the connection active, so you don't miss any important notifications.

My Thermomix® Sensor disconnects as soon as I shut my oven door. Is it faulty?

Certain oven doors are more insulated than others, which can cause the Bluetooth® connection to drop. It could also be that the probe's ceramic end is covered with food or is touching the tin. Using a metallic pot with a lid or covering the dish with foil rather than baking paper can also cause the Bluetooth® connection to drop. Always place the charger as close as possible to the oven door, ideally using the charger's magnetic contacts.

It may occur that the Bluetooth® connection drops. Should this happen, switch Bluetooth® off and on again. Having an additional device (such as a mobile) can help to check if your probe is connected or not. If you find that you can reconnect to the probe easily when you open the oven door, it is most likely that your oven is too insulated to allow a stable Bluetooth® connection.

How do I store my Thermomix® Sensor probe correctly in the charger?


Before placing the probe back into the charger, make sure it has been cleaned properly and all fat residue has been removed. The probe should be completely dry before being placed back into the charger.

How many smart devices can I connect at a time to Thermomix® Sensor?

Thermomix® Sensor can only be connected to 2 devices at a time, whether 2 Thermomix® TM6, 1 Thermomix® TM6 and a mobile or 2 mobiles.

Why isn't the Thermomix® Sensor firmware update working?

Make sure your Thermomix® Sensor is close to your smartphone and connected to the Cooking Centre app. Once a connection is established, the app prompts you to update your firmware if required. If no update prompt is available within the app, you already have the latest version of the firmware installed on your device.

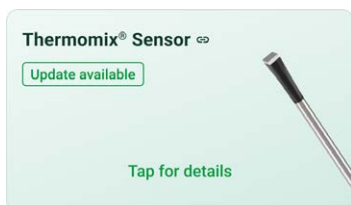

Do not use the probe in a microwave or a pressure cooker.

How do I update my Thermomix® Sensor device?

(See illustration on the left.)

If your Thermomix® Sensor is connected to the Cooking Centre app and a firmware update is required, you will receive an update prompt on the main screen of the app. Pressing the prompt will initiate the update process which will guide you through the firmware update process.

Can I use Thermomix® Sensor in a pressure cooker?

Thermomix® Sensor does not support pressure cooking due to increased pressure which could result in moisture getting inside the probe thus damaging the circuitry.

Using Thermomix® Sensor in a pressure cooker would void the warranty although it may not necessarily break the device.

Can I use Thermomix® Sensor in a microwave or a combination oven?

Unfortunately, you cannot use Thermomix® Sensor in a microwave as this would cause irreparable damage to the circuitry inside the probe itself. Besides, this is a fire hazard.

Can I put my Thermomix® Sensor probe in the dishwasher?

Yes, you could. But we recommend cleaning the probe manually.

Should I be worried if my Thermomix® Sensor probe's ambient temperature doesn't match my cooker?

In most cases, built-in cooker thermometers measure the temperature in a different spot from where you put your food, like in the back of the oven or the lid of the grill. There are also usually hot and cold spots in the cooker, rather than having one consistent temperature throughout the whole chamber.

That's why it's important for Thermomix® Sensor's ambient sensor to read the temperature right at the black ceramic handle. It tells you the actual temperature your food is exposed to and helps to calculate a more accurate cooking time.

Should I be worried if my Thermomix® Sensor probe's internal temperature doesn't match another thermometer I'm using?

If you're using more than one thermometer to check your meat temperature, there are a couple of important things to keep in mind:

- While the meat is still cooking, there can be variations in temperature in different parts of the meat. This can happen because of differences in thickness, fat content, or proximity to bones.
- Even if you're trying to measure in exactly the same spot, most other thermometers have their sensors right in the tip, whereas ours is about 2 cm from the pointed tip.

The core function of Thermomix® Sensor is to give you perfect and consistent results every time. This is why all of our probes' internal sensors are calibrated to $\pm 0.5^{\circ}\text{C}$ (1°F) in the factory using certified tools, and then thoroughly tested.

Why has the core temperature of my bread been reached, but the crust still does not look dark enough?

The outcome can vary depending on your oven settings and whether you are using a static or fan oven.

Thermomix® Sensor said my meat or fish was ready, but it did not reach the doneness I aimed for. Why?

Most issues with undercooking are due to probe placement.

The internal sensor of the probe is located about 2 cm above the pointed tip.

It is important that this part of the probe is in the thickest part of the meat or fish.

Other issues when cooking manually might be related to the oven temperature which needs to be adjusted according to the type of meat you are cooking:

- For meats with a higher core temperature (e.g. soft pork belly at 95°C), use a lower oven temperature (e.g. 140°C) to prevent drying or burning.
- For lower core temperatures (e.g. medium rare duck magret at 57°C), use a higher oven temperature (e.g. 200°C) to achieve a crispy skin without overcooking the core.
- For fall apart tender meat (e.g. collagen-rich tough cuts like pulled pork), we recommend cooking at a low oven temperature, such as 95°C . This longer cooking time at a lower temperature helps break down the collagen and results in a fork-tender texture.

The warranty for Thermomix® Sensor is 2 years.

How do I register my Thermomix® Sensor products?

Your warranty is automatically active when you purchase our product from an authorised seller, so we don't have a product registration process.

If you have trouble with your Thermomix® Sensor, contact your local Customer Care service.

Customer Care UK & Ireland

Monday to Friday 09:00 to 17:00

Telephone: +44 330 660 0834/+351 01 447 5157

Email: info@vorwerk.co.uk

www.vorwerk.co.uk



Food Safety Note

Food safety is important to everyone. However, vulnerable people (children under 5, adults aged 60 and over, pregnant women and people with weakened immune systems) are at an increased risk of food poisoning and should always consume food cooked at safe core temperatures.

The default cooking points are not food safe core temperatures for all options and should therefore not be used when cooking for vulnerable people with increased food safety risk.

For safe internal cooking temperatures, please refer to Thermomix® Sensor User Manual.

Recipe Photography and Styling

Ana Teixeira, Nantes, France, p. 24

Antonio Nascimento, Portugal, p. 20

Ben Dearnley, Australia, p. 33 (bottom left)

Craig Kinder, Australia, p. 25

Cristian Barnett, UK, p. 18, 19, 22 and 30

Dennis Savini, Switzerland, p. 23 (top right) and 28

Diana Moschitz, Vorwerk International, cover,
p. 11, 14, 16 and 31

D3 Studio, Nantes, France, p. 21

Laurent Grivet (photo) and Gaëlle Goumand
(stylist), Rennes, France, p. 29

Lukas Kirchgasser Fotografie, p. 26

Martin Gentschow, Dusseldorf, Germany, p. 32

Marie Sjoberg, Spain, p. 1-2

Rob White, Switzerland, p. 33 (top right)

Sonja Priller, Austria, p. 23 (bottom left) and 27

Superhumans, Italy, p. 5, 6, 7, 9, 17, 35 36 and 41



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. Any use of these word marks and logos by Vorwerk Elektrowerke GmbH & Co. KG is under licence.

